



Level the mount and mark.


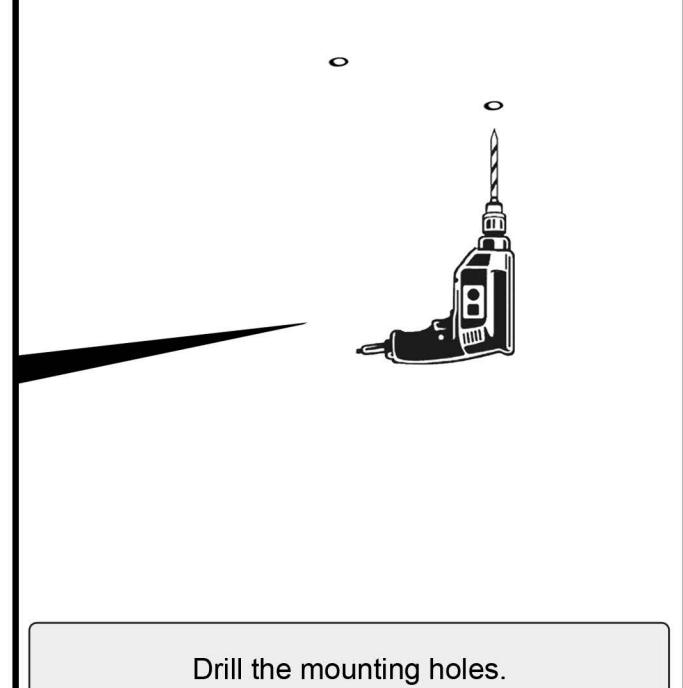


Drill the mounting holes.

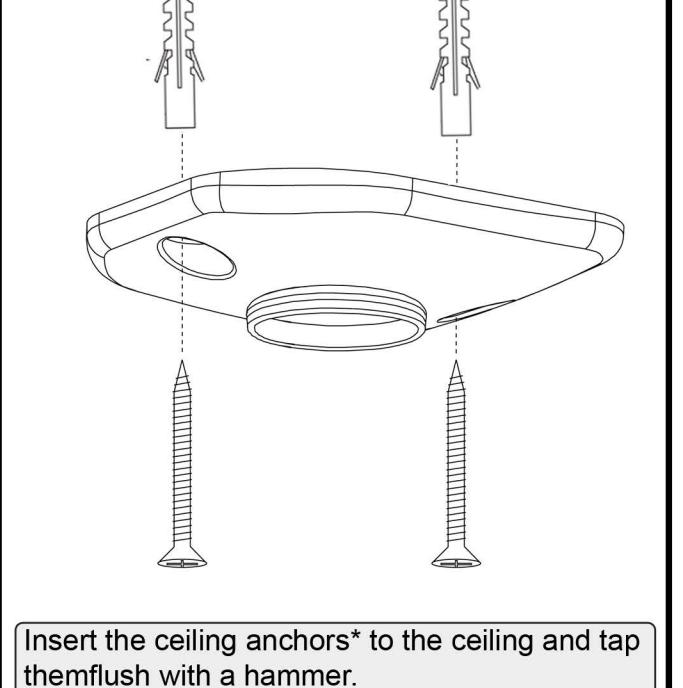


Insert the ceiling anchors\* to the ceiling and tap them flush with a hammer.


Never use ceiling anchors on dryceiling

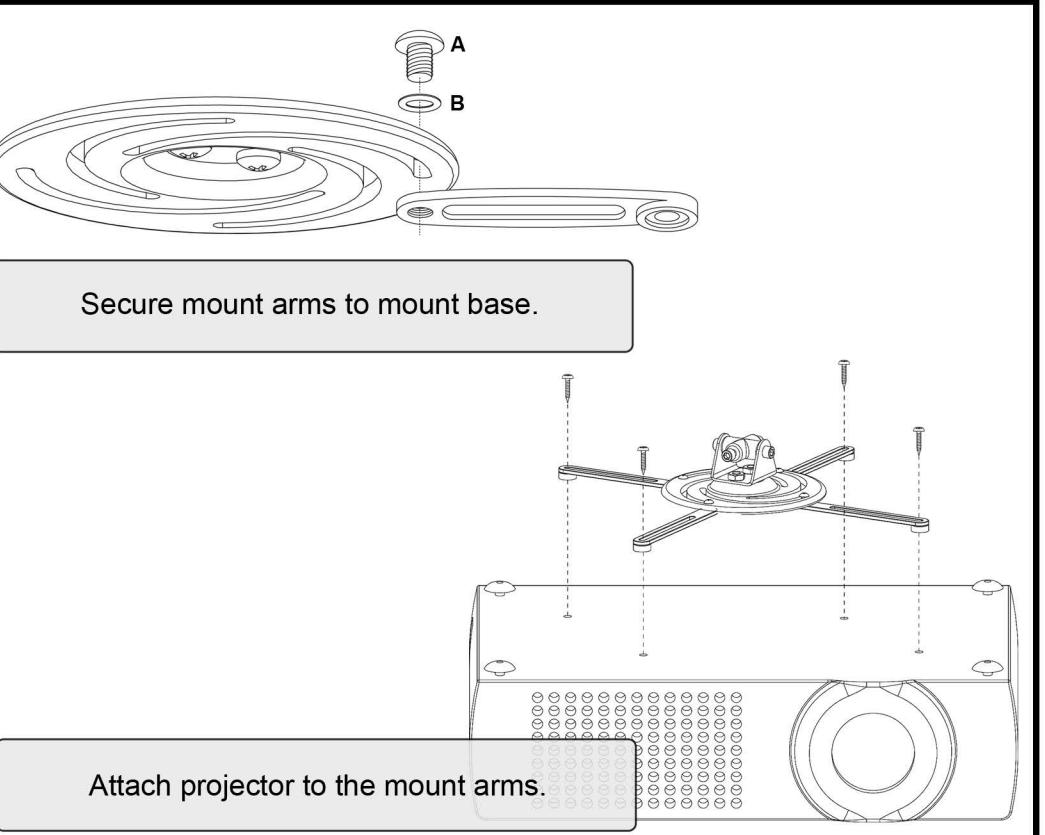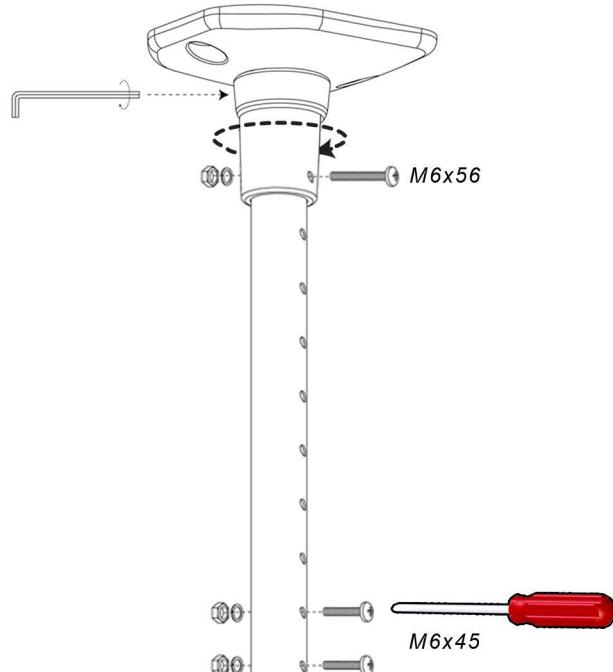


Attach projector to the mount arms.

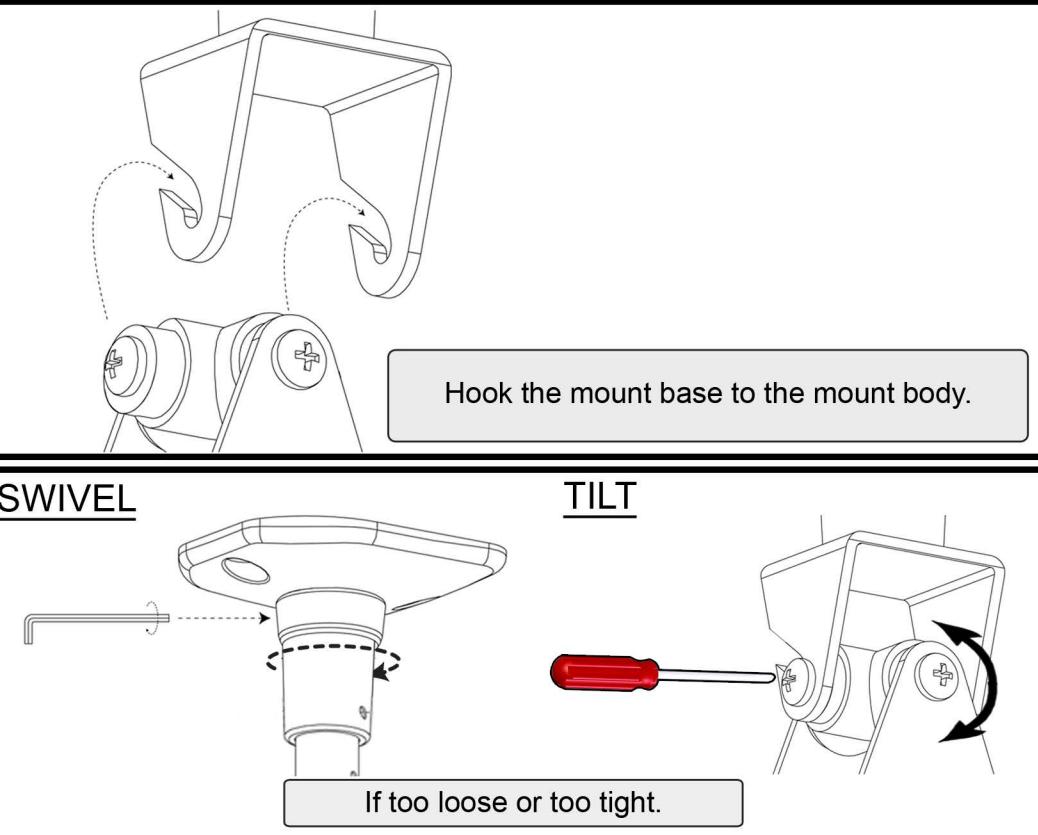

**Hook the mount base to the mount body**

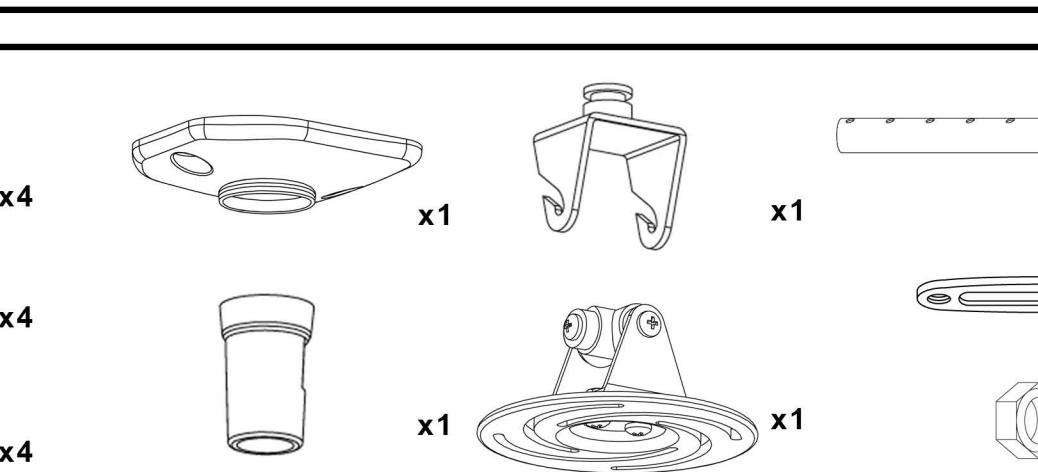

If too loose or too tight.

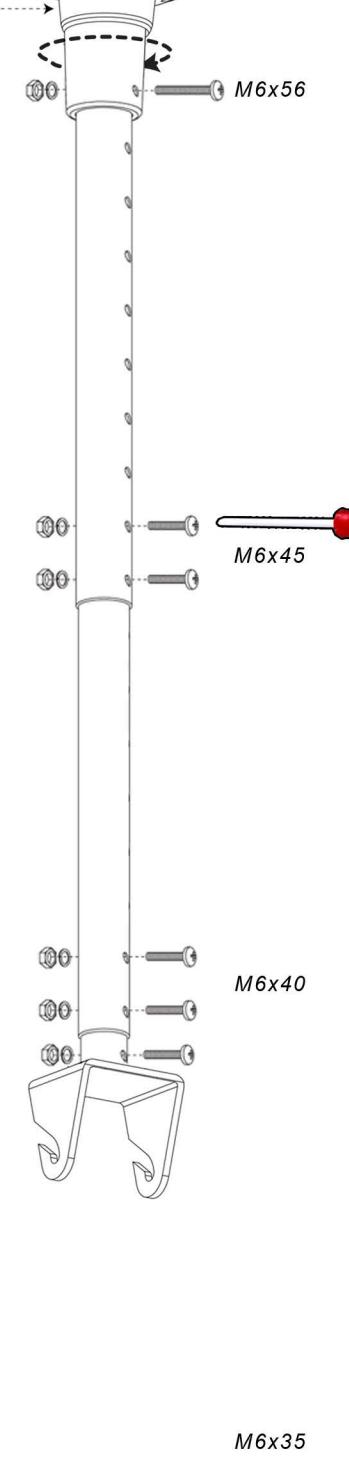

Screw body to ceiling plate  
and tighten safety screw.

## HARDWARE KIT

